


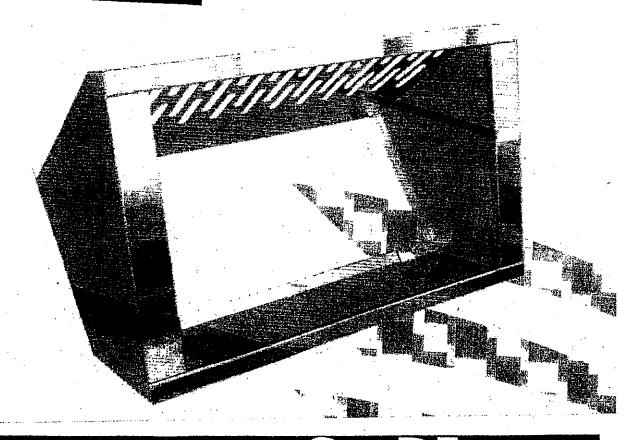

Installation Instructions for the SIND OCK OCK 257E and OCK 258E)



PARASÓL

HEATERS AUSTRALIAN

SunPhase.

SunPhase Radiant Heater



Installation/Operating Instruction




WARNING! PRIOR TO USE

Ensure that the plastic protective sheet coating is removed from all Outer Case Kit components before installation.


INSTALLATION INSTRUCTIONS

PLEASE NOTE: Heater must be installed at the 30° angle.

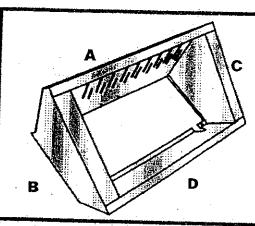

Please refer to the picture on the left for the descriptions below:

- A. Top Cover (With grille)
- B. Side Cover
- C. Side Cover
- D. Bottom Tray

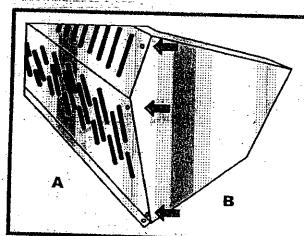

Line up screw hole of the first side cover (B) to the top cover (A), then use three screws provided to attach the two parts together.






SunPhase Radiant Heater






Installation/Onerating Instruction


INSTALLATION INSTRUCTIONS (Confinued)

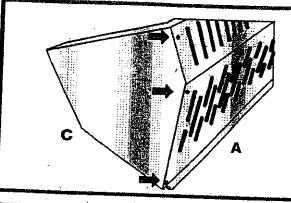

Repeat the steps mentioned above to attach the second side cover (C) to the top cover (A).

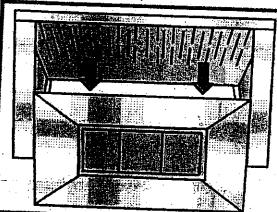

Place the assembled unit over the installed heater head, lining up the two screw holes nearing the back of the case kit with the wall mount unit holes.

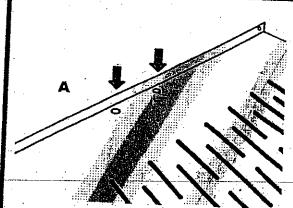


Use the two screws provided to attach the cover to the heating unit.

PARASOL HEATERS AUSTRALIANS SunPhase.

Installation/Operating Instructions




INSTALLATION INSTRUCTIONS (Continued)

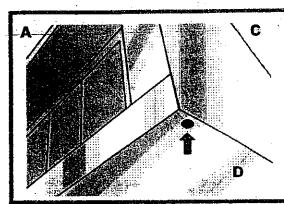


Slot in the bottom tray (D) into the side covers (B and C) so that it is able to sit.

Line up the screw holes and insert and attach the tray to the sides with the screws provided.

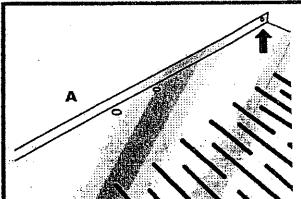

To secure the cover to the wall, drill two holes into the wall and attach with two screws.

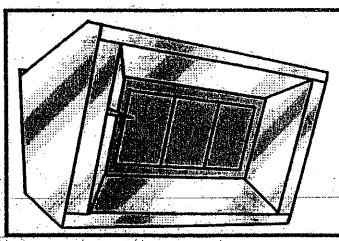

Make sure that there are no obstructions, and that the cover is in line with the heating unit.







IMPORTANT INFORMATION REGARDING UNIT



WARNING!

The Outer Case Kit can be used only with the Applied Climate Control Hot Spot Wall-Mounted Heater.



WARNING!

Make sure the heating unit is turned 'OFF' before commencing installation.

PLEASE NOTE:

- Do not place articles on or against this appliance.
- Do not spray aerosols in the vicinity of this appliance.
- o Do not use or store flammable materials near this appliance.
- Do not operate with covers or panels removed.





SunPhase Radiant Heater